



OWNER'S MANUAL

V3-HB_User_Manual_06-26-24

MAY 20, 2024
HUDDLBOX, LLC
1400 Buckhead Road, Birmingham, AL 35216

Contents

Section 1: Unpackaging the Huddlbox	2
Section 2: Product Diagrams.....	3
Figure 1 - PRO and Elite Models	3
Figure 2 – User Controls (PRO and Elite Models)	4
Figure 3 – Blitz Model	5
Figure 4 – User Controls (Blitz Model).....	6
Section 3: How To Use the Huddlbox	7
3.1 Powering On	7
3.2 Bluetooth Audio Connection (Channel 6/7)	7
3.3 Raising/Lowering the TV.....	8
3.4 Smart TV Technology	8
3.5 TV Audio (Channel 4/5)	9
3.6 Wireless Microphone (Channel 1).....	10
3.7 Speakers (LED Lights)	10
Section 4: Safety Precautions	11
4.1 Electrical:	11
4.2 Locking Casters:	11
4.3 Transporting the Huddlbox:.....	11
4.4 Poor Weather:	12

Section 1: Unpackaging the Huddlbox

- A. Remove the cardboard box from the pallet by removing staples at the bottom, and/or tearing off the cardboard flanges.
- B. After the cardboard box is free from the pallet, lift the cardboard box over Huddlbox. (This step may require two people for some models).
- C. Using scissors, carefully cut the plastic straps that secure the Huddlbox to the pallet.
- D. Remove the layers of foam that surround the Huddlbox.
- E. Unlock the brakes of all four (4) caster wheels.
- F. Roll the Huddlbox off the pallet carefully, lifting it gently to move it in between the empty spaces on the shipping pallet. NOTE: this step may require two or more people for some of the larger Huddlbox models.

Section 2: Product Diagrams

Figure 1 - PRO and Elite Models


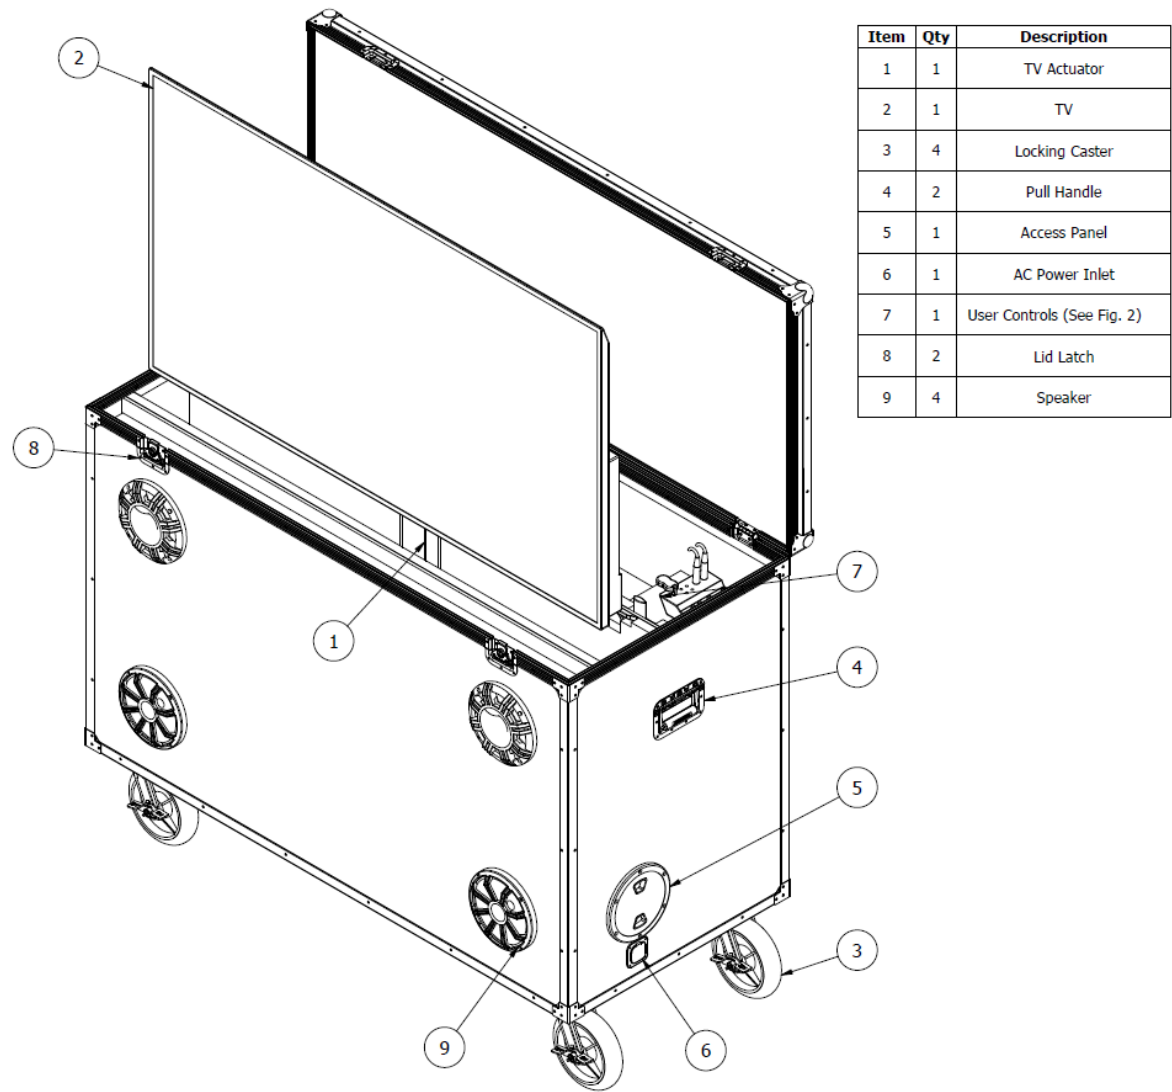


Figure 2 – User Controls (PRO and Elite Models)

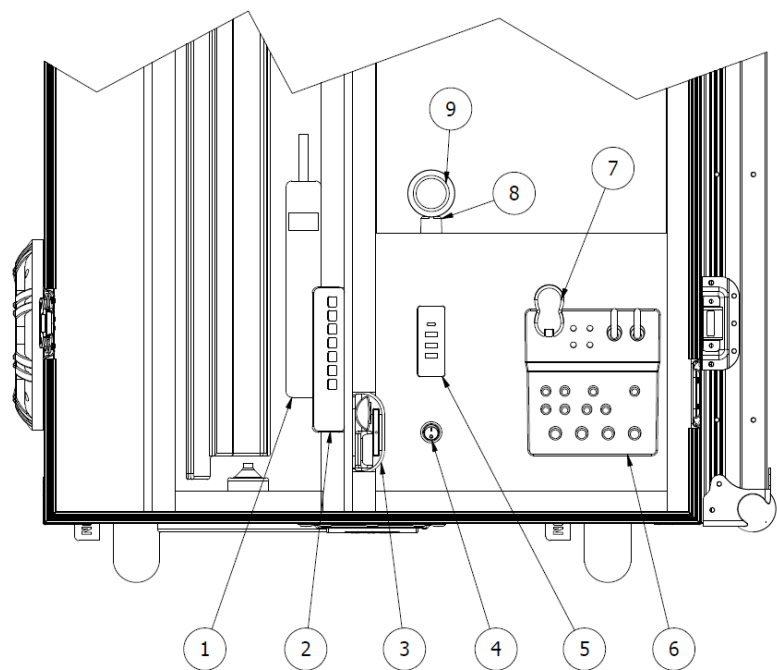

Item	Qty	Description
1	1	Power Strip (Thru Access Panel)
2	1	TV Actuator Controls
3	1	Remote Pocket (TV, Actuator, LED)
4	1	Power Switch
5	1	USB Charging Ports
6	1	Audio Mixer
7	1	Microphone Reciver
8	1	Microphone Mount
9	1	Micophone

Figure 3 – Blitz Model


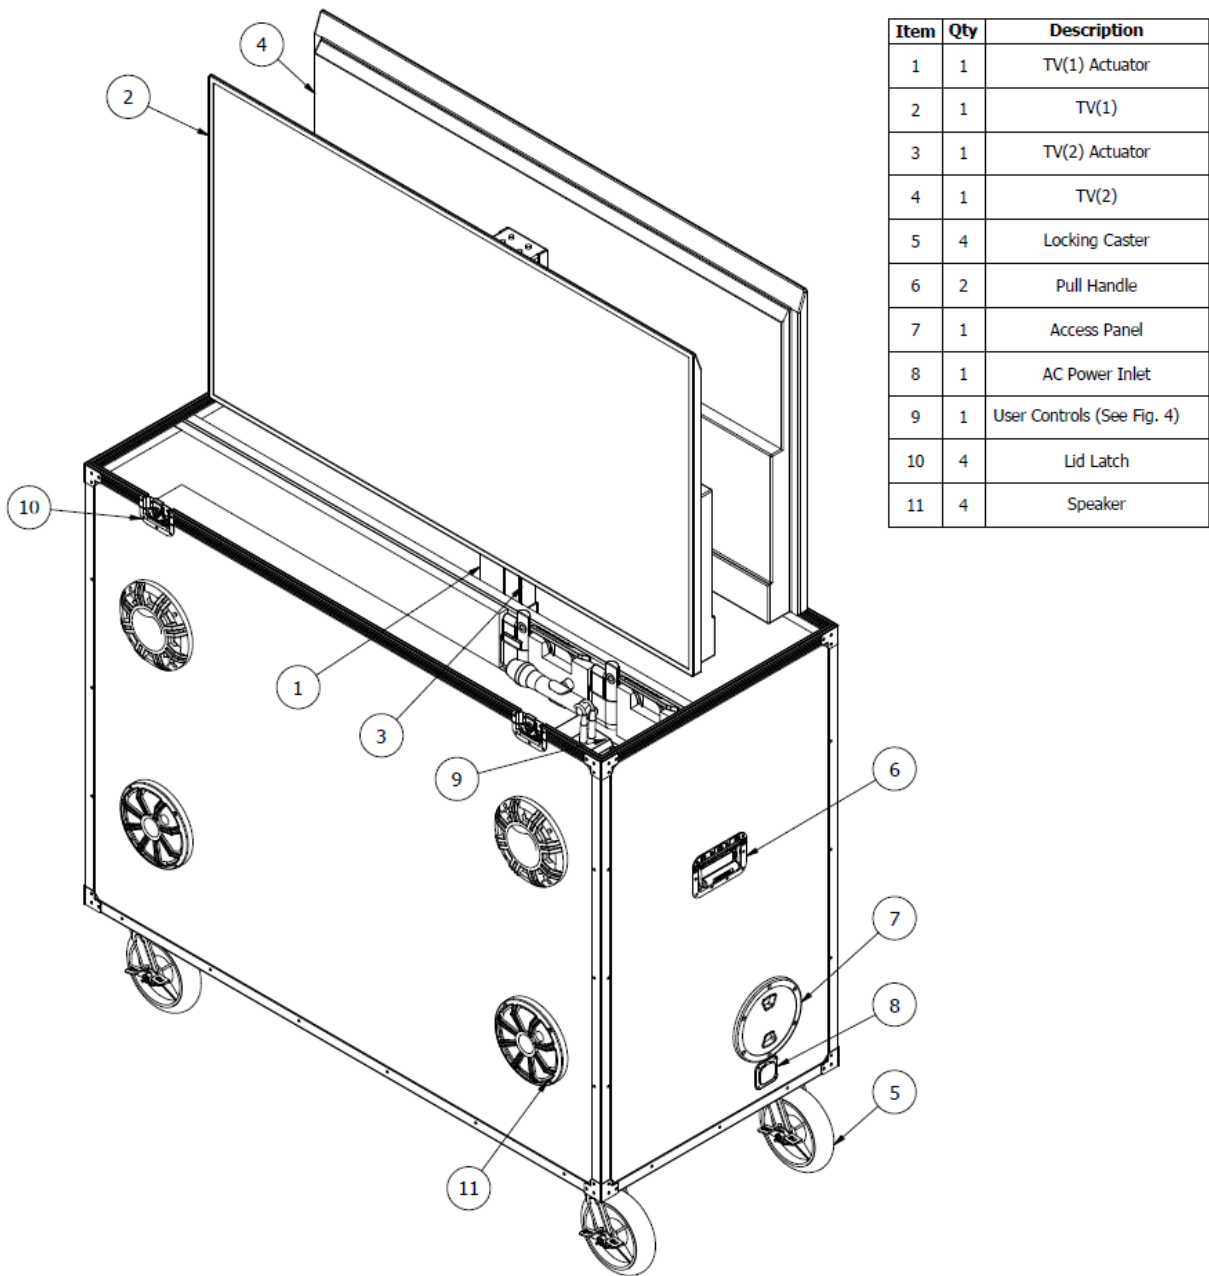


Figure 4 – User Controls (Blitz Model)

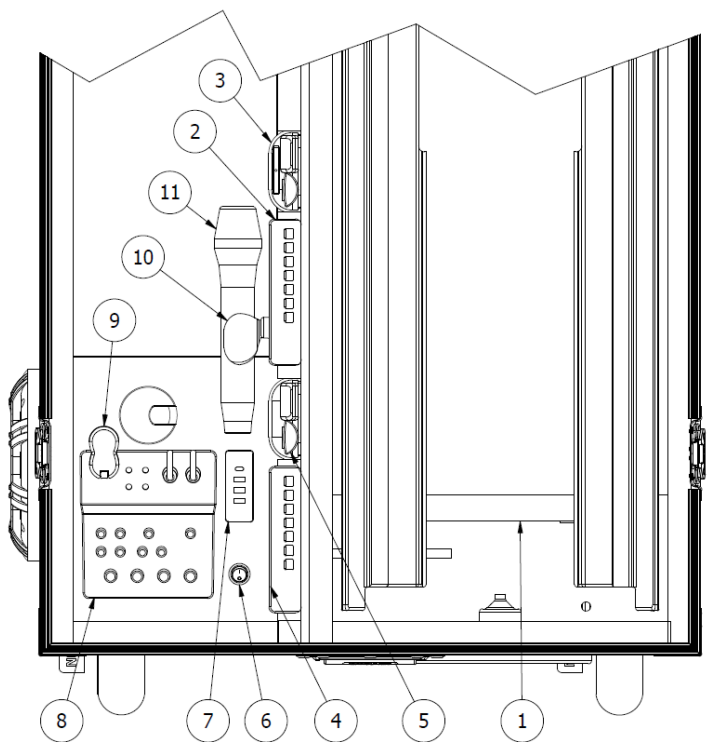

Item	Qty	Description
1	1	Power Strip (Thru Access Panel)
2	1	TV(1) Actuator Controls
3	1	Remote Pocket (TV(1) , Actuator(1), LED)
4	1	TV(2) Actuator Controls
5	1	Remote Pocket (TV(2) , Actuator(2))
6	1	Power Switch
7	1	USB Charging Ports
8	1	Audio Mixer
9	1	Microphone Reciver
10	1	Microphone Mount
11	1	Microphone

Section 3: How To Use the Huddlbox

3.1 Powering On

The AC **Power Inlet** is located on the side of the Huddlbox. Locate a nearby power outlet, and, using the 6' extension cord (provided), connect the Huddlbox to the nearby power outlet.

Open the **lid latches** and open the Huddlbox lid. For the Blitz model, open all four lid latches and remove the lid from the Huddlbox when in use. (Removing the lid will require two people.)

Turn on the **Power Switch** (see **Figure # 2** or **# 4**, depending on your specific Huddlbox).

3.2 Bluetooth Audio Connection (Channel 6/7)

On the **Audio Mixer**, in the Bluetooth | Stereo section shown below, press the button under the word “PAIR”. A blue light will flash, meaning the system is ready to be paired with a Bluetooth device. (NOTE: do not hold this button down.)



On your Bluetooth device, go to the Bluetooth settings menu and look for the option “Harbinger Mixer”. Connect your device to the “Harbinger Mixer” Bluetooth option.

The flashing blue light on the **Audio Mixer** will turn solid when the Bluetooth connection is successful.

We suggest that you DO NOT turn the volume up past half-way on the channel dial.

3.3 Raising/Lowering the TV

There are two ways to raise and lower the TV in the Huddlbox:



- A. Press and hold the up/down buttons on the TV Actuator controls.
- B. Press the up/down buttons on the TV Actuator remote.

Remove any cords connected to the TV before lowering it into the Huddlbox.

3.4 Smart TV Technology

The Huddlbox TVs are smart, Amazon Fire models, and should be loaded with the current manufacturer's software. If not, then a quick update might be needed once you're on Wi-Fi.

The TV requires the Huddlbox to be plugged in and turned on to operate.

Power on your TV using the TV remote included. Connect the TV to Wi-Fi.

You may connect a device to the TV using an HDMI cable. (HDMI > USB-C cable included)

You may also mirror content from a device to the TV.

3.5 TV Audio (Channel 4/5)

The volume for the TV audio is controlled by the Channel 4|5 dial located on the **Audio Mixer**. Do not turn up the Channel 4|5 dial past halfway.

We suggest that you DO NOT turn the volume up past half-way on the channel dial.

To increase TV volume further, turn up the volume on the TV using the TV remote.



3.6 Wireless Microphone (Channel 1)

Remove the wireless **microphone** from the **microphone mount**.

- A. Press the power button on the **microphone**.
- B. Press the power button on the **microphone receiver** (located on the left side).



- C. Use the Channel 1 dial located on the **Audio Mixer** to adjust the volume for the **microphone**.


We suggest that you DO NOT turn the volume up past half-way on the dial.

When the microphone is not in use, turn off the power on the **microphone** and the **microphone receiver**.

The **microphone** and **microphone receiver** are both rechargeable. A charge is required for the wireless microphone to operate. You may charge the microphone and microphone receiver using the **USB charging ports** on the Huddlbox. (Note: The Huddlbox must be plugged into a power outlet for the **USB charging ports** to provide a charge.)

3.7 Speakers (LED Lights)

The Huddlbox **speakers** have customizable LED-colored lights. Use the speaker remote to customize the LED speaker lights as you wish.

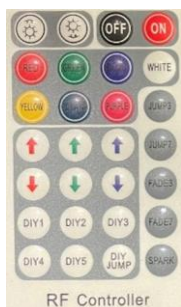

Section 4: Safety Precautions

4.1 Electrical:

Huddlbox contains multiple electronic components and a 12volt DC battery. Electrical shock hazards may be present inside compartment(s) that house electrical devices. A trained person should perform all repairs, replacements, and troubleshooting. Huddlbox is not responsible for any injury or damage that may occur from untrained personnel attempting electrical troubleshooting or repairs. If you have any issues with your Huddlbox, do not attempt to repair it on your own. Instead, fill out this [form](#) and a member of our support team will contact you to resolve. For additional support, you may reference the Troubleshooting and FAQ sections in the Huddlbox Resource Center.

4.2 Locking Casters:

Huddlbox is equipped with locking caster wheels to prevent undesired movement. **When Huddlbox is not actively being moved, all casters should be fully locked.** Failure to do so may result in damage and/or injury to Huddlbox and surrounding person(s) or property.

4.3 Transporting the Huddlbox:

Precautions should be taken when transporting Huddlbox by person. **Do NOT transport the Huddlbox with the TV up or lid open.** Do NOT traverse inclines and decline of grades that are too steep for the person to support the weight of Huddlbox.

Transporting the Huddlbox over steep and uneven terrain can be challenging and potentially dangerous. To ensure safety, use extra help and implement additional safety measures when needed. This precautionary step can prevent the loss of control of Huddlbox or it tipping over.

When transporting Huddlbox in a vehicle or trailer, it is of utmost importance to fully secure the Huddlbox. This includes locking all casters and strapping Huddlbox to designated tiedown locations. **Huddlbox, LLC reiterates that it is not responsible for any injuries or damage that may occur from improper transportation practices or failure to fully secure the Huddlbox.**

4.4 Poor Weather:

High winds could cause damage to some components of the Huddlbox and, in extreme cases, introduce a risk of tipping over. In windy conditions over 20mph, lower the TV, close, and securely latch the lid.

The audio system may continue to be used in poor weather.

When raining, Huddlbox must be closed and unplugged from an AC power source.